

# Appliance - Manuals

**Ailsworth**

**Alwalton**

**Apethorpe**

**Castor**

**Chesterton**

**Folksworth**

**Woodnewton**

**Yarwell**

**Breath, Explore, Relax**

 
# Culina Gas Hob Instructions

## how to use the appliance

---

The following symbols will appear on the control panel, next to each control handle :

- Black circle: gas off
- 🔥 Large flame: maximum setting
- 🔥 Small flame: minimum setting

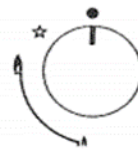

- The minimum setting is at the end of the anti-clockwise rotation of the control handle.
- All operation positions must be selected between the maximum and minimum position.
- The symbol on the control panel, next to the control handle will indicate which burner it operates.

### Automatic ignition with flame failure safety device

*The appliance is fitted with a flame failure safety device on each burner, which is designed to stop the flow of gas to the burner head in the event of the flame going out.*

# Culina Gas Hob Instructions

## how to use the appliance

---



### Automatic ignition with flame failure safety device

 
The appliance is fitted with a flame failure safety device on each burner, which is designed to stop the flow of gas to the burner head in the event of the flame going out.

To ignite a burner:

- o Press in the control knob of the burner that you wish to light and turn it anti-clockwise to the maximum position.
- o If you keep the control knob depressed, the automatic ignition for the burner will operate.
- o You should hold down the control knob for 15 seconds after the flame on the burner has lit. If after 15s the burner has not lit, stop operating the device and open the compartment door and/or wait at least 1 min before attempting a further ignition of the burner.
- o After this 15-second interval, to regulate the flame you should continue turning the control knob anti-clockwise until the flame is at a suitable level. The operating position **MUST** be at a position between the maximum and minimum position.
- o To switch the burner off, turn the control knob fully clockwise to the gas off position.
- o In case of power failure, the burners can be lit by carefully using a match.

# Culina Oven Instructions


## Control Panel

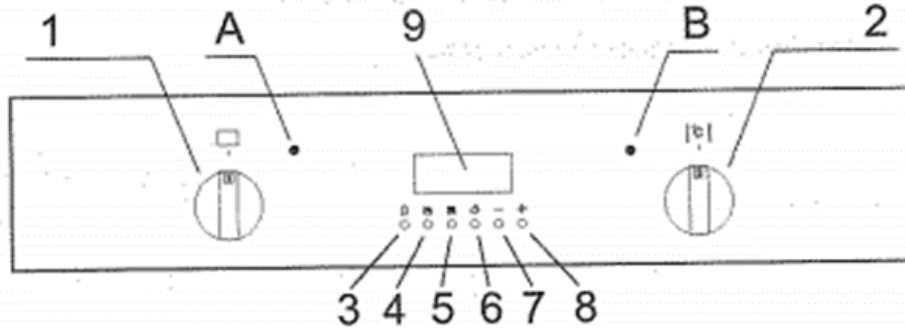

- 1) Oven function selector knob
- 2) Thermostat control knob
- 3) Minute minder button
- 4) Duration button
- 5) End cook button
- 6) Manual operation button
- 7) Minus button
- 8) Plus button
- 9) LED display

- A) Power indicator light  
B) Oven operating light

## Oven programmer/timer display

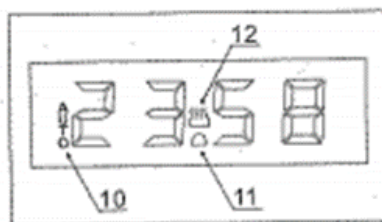 

- 10) Auto function symbol
- 11) Minute minder symbol
- 12) Manual operation symbol

# Induction Hob Instructions

How do you work a Bosch induction hob?


## Using your induction hob

1. Switch the **hob** unit on at the wall (this may also require pressing a boost switch).
2. Place your **induction** pan on the **hob** ring you wish to **use**.
3. Hold your finger down on the power switch located on the appliance.
4. Start cooking by selecting the sensor which relates to the ring you wish to **use**.

How do I unlock my Bosch touch hob?

The **hob** is **locked**. To switch off: **Touch** the 0 symbol for approx. 4 seconds. The lock is released.

If your **hob** doesn't have a key button, press the P symbol for approximately 3 seconds to deactivate the childproof lock. If your **hob** doesn't have a key or a p button, press the L symbol for approximately 3 seconds to deactivate the childproof lock. It could be that you've activated the cleaning lock. 18 Sept 2018

Can you use normal pans on an induction hob? 

**Can I use a normal pan on an induction hob?** Induction hobs only work with **pots** and **pans** that contain ferrous metal in the base. To check if your **pans** will work, hold a magnet next to the **pan** base; if it attracts, the **pan** will work on **induction**.

Regular stovetops heat pots and **pans** through contact. If you place your hand, or a glass **pot on an induction cooktop**, neither will heat up because **they** are not magnetic and therefore not affected by the alternating magnetic field of the **induction** burner. 25 Mar 2021






**Please use the pans provided in your Lodge.**

# Culina Microwave Oven

## Operation Instructions

### 1. Clock Setting





When the microwave oven is electrified, the oven will display "0:00", buzzer will rings once.

- 1) Press "Clock/Pre-Set", the hour figures will flash, and the indicator for clock "🕒" will light. 
- 2) Turn "👉" to adjust the hour figures, the input time should be within 0--23. 
- 3) Press "Clock/Pre-Set", the minute figures will flash. 
- 4) Turn "👉" to adjust the minute figures, the input time should be within 0--59. 
- 5) Press "Clock/Pre-Set" to finish clock setting. The indicator for clock "🕒" will go out, ":" will flash, and the time will light. 

### 2. Cooking food

Press "Micro./Grill/Combi." and turn "👉" to select the function you want. Press "Micro./Grill/Combi." and turn "👉" to select the cooking time. Press "Quick Start/Start" to start cooking.

Example: If you want to use 80% microwave to cook food for 20 minutes, you can operate the oven as the following steps.

- 1) Press "Micro./Grill/Combi.", the screen display "P100". 
- 2) Turn "👉" to adjust 80% microwave power until the oven displays "P 80". 
- 3) Press "Micro./Grill/Combi." to confirm, the screen displays "P 80". 
- 4) Turn "👉" to adjust the cooking time until the oven displays "20:00". 
- 5) Press "Quick Start/Start" to start cooking or press "Cancel/Stop" to cancel the settings.

Note: the step quantities for the adjustment time of the coding switch are as follow:

- 0--1 min : 5 seconds
- 1--5 min : 10 seconds
- 5--10 min : 30 seconds
- 10--30 min : 1 minute
- 30--95 min : 5 minutes

# Culina Microwave Oven



## "Micro./Grill/Combi." Pad instructions


Order	LED Display	Microwave Power	Grill Power
1		100%	
2		80%	
3		50%	
4		30%	
5		10%	
6		0%	100%
7		55%	45%
8		36%	64%


Note: When half the grill time passes, the oven will pause and beep twice, and this is normal. You can just press "Quick Start/Start" to continue cooking. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press "Quick Start/Start" to continue cooking. If there is no operation in 1 minute, the oven will continue working and beep once.

### 3. Program set in Advance

- 1) Set the clock first. (Consult the instruction of clock setting.)
- 2) Input the cooking program. Three stage power levels can be set at most. Defrost should always be set as the first stage, if it is included in the multi-level program.  
Example: If you want to use 80% microwave to cook food for 15minutes, you can operate the oven as the following steps.

- a. Press "Micro./Grill/Combi.", the screen display "P100".
- b. Turn " " to adjust 80% microwave power until the oven displays "P 80".
- c. Press "Micro./Grill/Combi." to confirm, the screen displays "P 80".
- d. Turn " " to adjust the cooking time until the oven displays "15:00".
- e. Be careful! Please do not press "Quick Start/Start" to start cooking.

- 3) Press "Clock/Pre-Set", the hour figures will flash, and the indicator " " will light.


- 4) Turn " " to adjust the hour figures, the input time should be within 0-23.





# Culina Microwave Oven

5) Press " **Clock/Pre-Set** ", the minute figures will flash.





6) Turn "  " to adjust the minute figures, the input time should be within 0–59.




7) Press " **Quick Start/Start** " to finish setting. The indicator for clock "  " will flash. If the door is closed, buzzer will ring twice when the time arrives, then cooking will start automatically and the indicator for clock "  " will go out.

## 4. Defrost By W.T.

1) Press " **Defrost By W.T.** " button. LED will display "dEF1", "  " and "  " will light.





2) Turn "  " to select the weight of food. The weight is from 100 to 2000g.




3) Press " **Quick Start/Start** " to start defrosting food. "  " and "  " will flash.

## 5. Defrost By Time

1) Press " **Defrost By Time** " button. LED will display "dEF2", "  " and "  " will light.



2) Turn "  " to select the cooking time. The MAX.time is 95 minutes.



 
3) Press " **Quick Start/Start** " to start defrosting food. "  " and "  " will flash.

## 6. Multi-section cooking


At most 3 sections can be input for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.


Example: If you want to use "20 minutes of 100% microwave power + 5 minutes of 80% microwave power " to cook food.

1) Press " **Micro./Grill/Combi.** " pad , the screen display "P100".



 
2) Press " **Micro./Grill/Combi.** " to select 100% microwave power.



3) Turn "  " to select cooking time.



 
4) Press " **Micro./Grill/Combi.** " pad , the screen display "P100".






# Culina Microwave Oven

5) Turn "  " to select 80% microwave power.



6) Press " **Micro./Grill/Combi.** " pad, then turn "  " to select cooking time of 80% microwave power.



7) Press " **Quick Start/Start** " to start cooking or press " **Cancel/Stop** " to cancel the setting.

## 7. Start/Quick Start


When the oven is in the waiting state, Press " **Quick Start/Start** " to start cooking food with full microwave power for 1 minute. Each press will increase one minute. The maximum cooking time is 95 minutes.

## 8. Auto Menu

Example: If you want to use "Auto Menu" to cook fish of 250g.

1) Press " **Auto Menu** " , "  " and " **AUTO COOK** " will light.




2) Turn "  " to select the function you want.




3) Press " **Auto Menu** " button to confirm.



4) Turn "  " to select the weight of fish. "g" will light.



5) Press " **Quick Start/Start** " to start. "g" will go out, "  " and " **AUTO COOK** " will flash.

## 9. Lock-out Function for Children

Lock: In waiting state, press " **Cancel/Stop** " for 3 seconds, there will be a long beep denoting entering the children-lock state and oven will display " **8888** " .

Lock quitting: In locked state, press " **Cancel/Stop** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

## 10. Inquiring Function

(1) In microwave, grill or combination cooking state, press " **Micro./Grill/Combi.** " , the current power will be displayed for 4 seconds. After 4 seconds, the oven will turn back to the former state;

(2) In cooking state, press " **Clock/ Pre-Set** " to inquire the present time and the time will flash for 4 seconds.

(3) In preset state, press " **Clock/ Pre-Set** " to inquire the preset time and it will flash for 4 seconds.

 
# Culina Microwave Oven

The automatic menu procedure:

Menu	Order	Weight	Display
A-1 Auto Reheat	1	200 g	02:00
		400 g	03:00
		600 g	04:00
A-2 Vegetable	2	200 g	02:00
		300 g	03:00
		400 g	04:00
A-3 Fish	3	250 g	02:50
		350 g	03:50
		450 g	04:50
A-4 Meat	4	250 g	02:50
		350 g	03:50
		450 g	04:50
A-5 Pasta	5	50 g(with water 450ml)	02:00
		100 g(with water 800ml)	03:00
A-6 Potato	6	200 g	03:00
		400 g	04:00
		600 g	05:00
A-7 Reheat Pizza	7	200 g	04:00
		400 g	05:00
A-8 Soup	8	200 ml	03:00
		400 ml	04:00

# Culina Dishwasher

## Control Panel

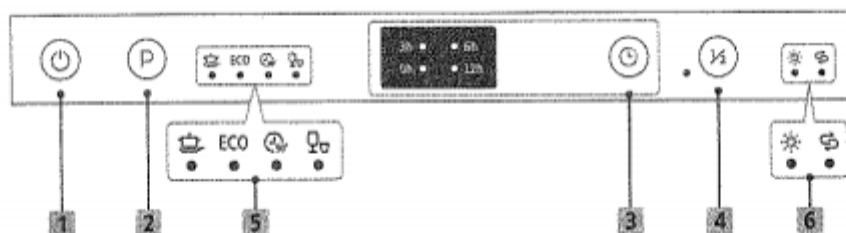

### Operation (Button)

<b>1 Power</b>	Press this button to turn on the dishwasher, the screen lights up.
<b>2 Program</b>	Select the appropriate washing program and corresponding indicator will be lit.
<b>3 Delay</b>	Press this button to set the delay time, 3/6/9/12H
<b>4 Half load</b>	When you have about or less than 6 place setting dishware to wash, you can choose this function to save energy and water. (It can only be used with Intensive, ECO and 90 min.)

 
### Display

<b>5 Program icon</b>	<b>Intensive</b> For heavily soiled items include pots and pans. With dried on food.
	<b>ECO</b> This is the standard program suitable for normally soiled loads, such as pots, plates, glasses and lightly soiled pans.
	<b>90 min</b> For lightly soiled crockery and glass.
	<b>Rapid</b> A shorter wash for lightly soiled loads that do not need drying.
<b>6 Warning icon</b>	<b>Rinse Aid</b> If the " * " icon is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.
	<b>Salt</b> If the " S " icon is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.

# Culina Washer / Dryer

## OPERATIONS


### Control Panel

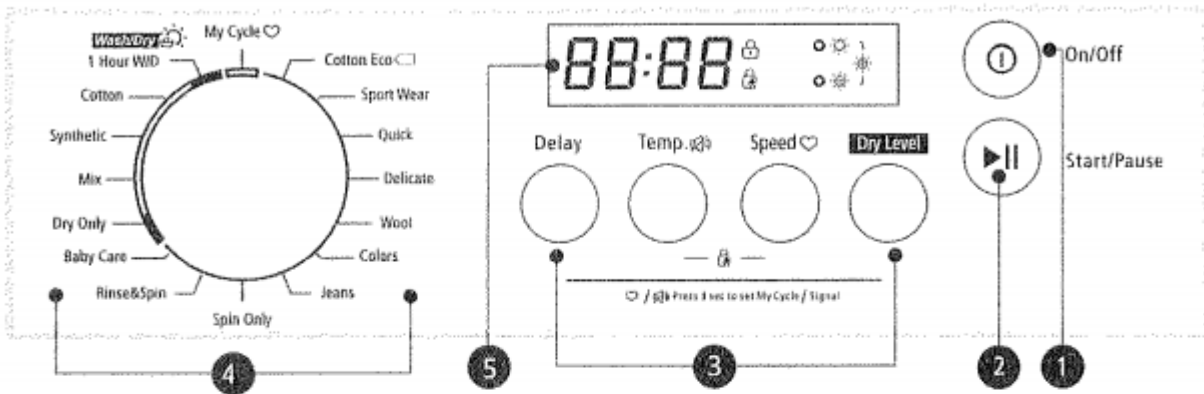

### Note!

- The chart is for reference only, Please refer to real product as standard.

 - On/Off**  
Product is switched on or off.
- Start/Pause**  
Press the button to start or pause the washing cycle.
- Option**  
This allows you to select an additional function and will light when selected.
- Programmes**  
Available according to the laundry type.
- Display**  
The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

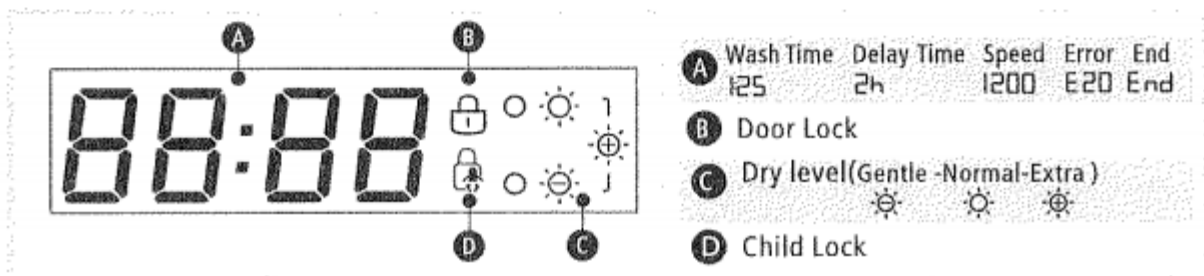

# Culina Washer / Dryer

## OPERATIONS

### ■ Option



Delay

Set the Delay function:

1. Select a programme
2. Press the Delay button to choose the time (the delaying time is 0-24 H.)
3. Press [Start/Pause] to commence the delay operation



On/Off



Choose the Programme



Setting time



Start

Cancel the Delay function:

Press the [Delay] button until the display be 0H. It should be pressed before starting the programme. If the programme already started, should press the [On/Off] button to reset the programme.

### ⚠ Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the [On/Off] button the program will continues.

Programme	Option	Programme	Option
	Delay		Delay
Cotton Eco	<input type="radio"/>	Rinse&Spin	<input type="radio"/>
Sport Wear	<input type="radio"/>	Dry Only	<input type="radio"/>
Quick	<input type="radio"/>	Mix	<input type="radio"/>
Delicate	<input type="radio"/>	Baby Care	<input type="radio"/>
Wool	<input type="radio"/>	Synthetic	<input type="radio"/>
Colors	<input type="radio"/>	Cotton	<input type="radio"/>
Jeans	<input type="radio"/>	1 Hour W/D	<input type="radio"/>
Spin Only	<input type="radio"/>		

Means optional

# Culina Washer / Dryer

## OPERATIONS

### ■ Other Functions



#### My Cycle

Memory the frequently used programmes

Press [ ]3sec. to memory the running programme. The default is cotton.



#### Child Lock

To avoid mis operation by children.



On/Off



Start/Pause



Press [Temp.] and [Speed]  
3 sec. till buzzer beep.



### ⚠ Caution!

- Press the two button 3sec. also to be released the function.
- The "Child Lock" will lock all buttons except [On/Off].
- Cut off the power supply , the kid's protection is to be released.
- The child lock will remain effective when the power is resumed for some models.



#### Speed

Press the button to change the spin speed.

Programme	Default Speed(rpm)	Programme	Default Speed(rpm)
	1400		1400
Cotton Eco	800	Rinse&Spin	800
Sport Wear	800	Dry Only	1400
Quick	800	Mix	1000
Delicate	600	Baby Care	1000
Wool	400	Synthetic	1200
Colors	800	Cotton	1400
Jeans	800	1 Hour W/D	1400
Spin Only	800		

### ⚠ Caution!

- When the lights of speed are off means the spin speed is 0.

# Culina Washer / Dryer

## OPERATIONS



Temp.

Press the button to regulate the temperature(Cold,20°C,30°C, 40°C,60°C,90°C)



Mute the buzzer



On/Off



Start/Pause



Press the [Temp.]button for 3sec.the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

### ⚠ Caution!

- After Muting the buzzer function, the sounds will not be activated any more.



Dry Level

Press the Dry Level button continuously to choose the dry level: Extra Dry/Normal Dry/ Gentle Dry.

- ☀ Extra Dry:Need to wear clothes immediately ,we can choose this function
- ☀ Normal Dry: The normal dry procedure
- ☀ Gentle Dry:Only to dry slightly and then is just ok .

### 📌 Note!

- Drying hints
  - Clothes could be dried after spinning
  - To ensure quality dry the textiles,please classify them according to their kinds and the drying temperature.
  - Synthetic should be set the proper drying time .
  - If you want to iron the clothes after drying,please put them for a while.
- Clothes not suitable for drying
  - Particularly delicate items such as synthetic curtains,woolen and silk, clothes with metal inserts,nylon stockings,bulky clothes,such as anoraks,bedcovers,quilts,sleeping bags and duvets must not be dried.
  - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
  - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

# Culina Washer / Dryer

## OPERATIONS

### ■ Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Cotton Eco	To increase the washing effects, washing time is increased.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner, and make the rinse performance better to protect the baby skin.
Jeans	Specially for jeans.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Colors	Washing brightly colored clothes, it can protect the colors better .
Sport Wear	Washing the activewear.
Quick	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Spin Only	Extra spin with selectable spin speed.
Rinse&Spin	Extra rinse with spin.
Dry Only	Select it to dry clothes, the temperature is different .The drying time according to the load .
1 Hour W/D	For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts). When you have an urgent appointment but no more clean shirt left in your cupboard, this program will help you. Time duration is only 1 hour including wash and dry. Remark: Big towels or jeans is not suitable for this program, they will enlarge the time duration and affect the moisture content.

### Note!

- Reference to your product to select the programmes.



# Culina Washer / Dryer

## OPERATIONS

### ■ Washing Programmes Table

Programme	Washing/Drying Load (kg)	Temp.(°C)	Default Time(H)
	8.0	Default	8.0
			14:00
Cotton ECO	8.0	30	1:07
Sport Wear	4.0	40	1:19
Quick	2.0	Cold	0:15
Delicate	2.5	30	1:00
Wool	2.0	40	1:07
Colors	8.0	Cold	1:00
Jeans	8.0	40	1:48
Spin Only	8.0	—	0:12
Rinse&Spin	8.0	—	0:31
Baby Care	4.0	60	1:45
☼ Dry Only	—/6.0	—	4:28
☼ Mix	8.0/6.0	40	1:13
☼ Synthetic	8.0/4.0	40	2:20
☼ Cotton	8.0/6.0	40	2:40
☼ 1 Hour W/D	1.0/1.0	Cold	1:00

- The energy class is A Energy test program: Cotton Eco 60°C Speed: the highest speed; Other as the default. Half load for 8.0Kg machine:4.0Kg.
- "Cotton Eco 60°C" is the standard washing program and "Dry only" is the standard drying programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, that the actual water temperature may differ from the declared cycle temperature.

#### Note!

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.
- The programme with ☼ can be chosen dry function.

# Wine Cooler Instructions

## To switch the power on/off

Press and hold the power button for one second to switch the wine cooler on.

Press and hold the power button for five seconds to switch the wine cooler off.

## To change the temperature

Press the “+” or “-” buttons for the appropriate zone until the required temperature is shown on the display.

The pre-set temperature is 8°C/46°F for left/upper zone and 12°C/54°F for the right/lower zone.

To change the display from Fahrenheit to Celsius, or Celsius to Fahrenheit, press and hold the light button for five seconds.

To view the set temperature, touch the appropriate “+” or “-” button at any time and the set temperature will flash in the LED display for five seconds.

The display shows the current internal temperatures when the wine cooler is on.

## Optimal temperature selection

Whilst wine is best stored at temperatures between 13°C and 15°C, your wine can also be