

Appliance - Manuals

Elton

Fotheringhay

Sutton

Wansford

Kings Cliffe

Rockingham
Forest Park

Breath, Explore, Relax

Bosch Gas Hob Instructions

Switching on manually

1. Press the control knob for the selected burner and turn it anticlockwise to the highest power setting.
2. Hold an igniter or a naked flame (such as a lighter or a match) against the burner.

Automatic ignition

If the hob has automatic ignition (ignition plugs):

1. Press the control knob for the selected burner and turn it anticlockwise to the highest power level. While the control knob is held down, all the burners will generate sparks. The flame ignites. Wait a few seconds.
2. Release the control knob.
3. Turn the control knob to the required position.

If the burner does not ignite, switch it off and repeat the steps described above. This time, hold the control knob down for longer (up to 10 seconds).

Warning – Risk of deflagration!

If the flame does not ignite after 15 seconds, switch off the burner and open a window or the door to the room. Wait at least one minute before switching the burner on again.

Note: It is important to keep the appliance clean. If the ignition plugs are dirty, this may cause ignition problems. Clean the ignition plugs regularly with a small, non-metallic brush. Take care to prevent the ignition plugs from suffering any heavy knocks.

Safety System

Your hob is equipped with a safety system (thermocouple) that cuts off the gas when the burners are accidentally switched off.

To ensure the device is active:

Switch on the burner as usual.

Without releasing the control knob, press and hold it down firmly for 4 seconds after lighting the flame.

Switching off a burner

 
Turn the corresponding control knob clockwise to the 0 setting.

A few seconds after the burner is switched off, a sound (thud) will be produced. This is not a fault- this means that the safety device is no longer operating.


Bosch Oven Instructions

en Getting to know your appliance


- Open the appliance door as infrequently as possible when the appliance is in use.

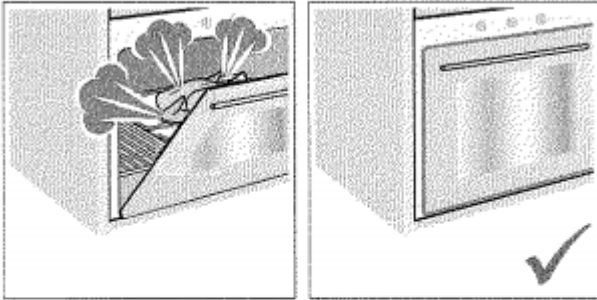

 - It is best to bake several cakes one after the other. The cooking compartment stays warm. This reduces the baking time for the second cake. You can place two cake tins next to each other in the cooking compartment.

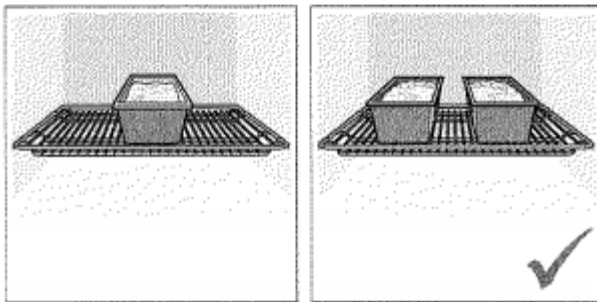

 - For longer cooking times, you can switch the appliance off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

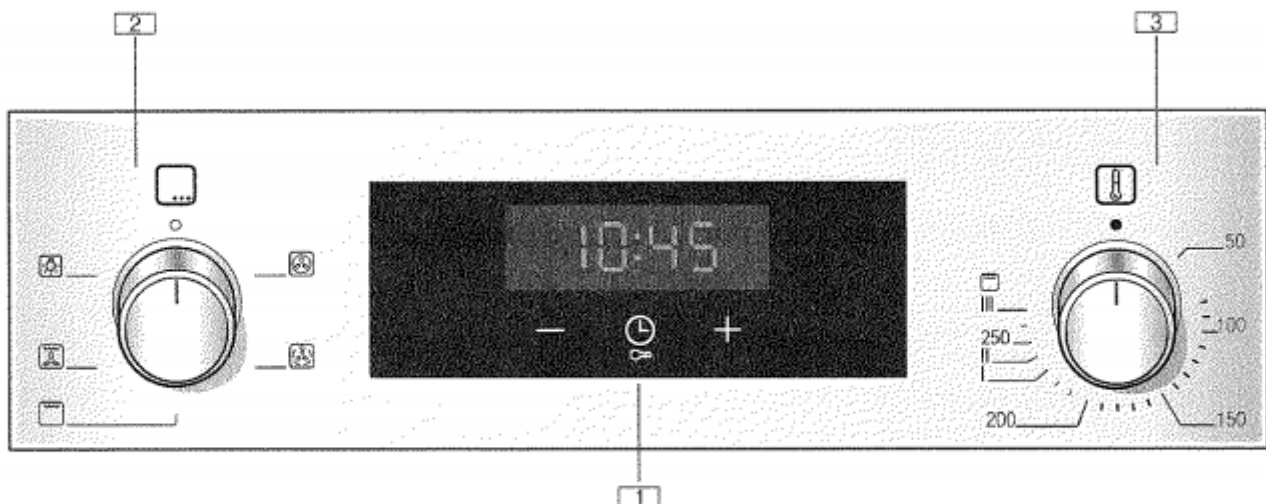

1 Buttons and display

The buttons are touch keys with sensors underneath. Simply touch a symbol to select the function. The display shows symbols for active functions and the time-setting options.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Getting to know your appliance

In this section, we will explain the indicators and controls. You will also find out about the various functions of your appliance.

Note: Depending on the appliance model, individual details and colours may differ.

Control panel

You can set your appliance's various functions on the control panel. Below, you will see an overview of the control panel and the layout of the controls.

2 Function selector

Use the function selector to set the heating function or other functions. You can turn the function selector clockwise or anti-clockwise from the "Off" position.

Bosch Oven Instructions

3 Temperature selector






Use the temperature selector to set the temperature for the heating function or select the setting for other functions.

You can only turn the temperature selector clockwise from the "Off" position, until it offers resistance. Do not turn the selector beyond this point.

Note: On some appliances, the control knobs can be pushed in. To push the control knob in and engage it or to release it again, turn it to the "Off" position.

Buttons and display

You can use the buttons to set various additional functions on your appliance. You will be able to see the values for these on the display.

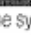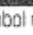
Symbol	Meaning
	Time-setting options Tap the symbol repeatedly to select the timer  , duration  , and time  and time.
	Childproof lock Lock and unlock the oven functions on the control panel by pressing and holding the button for approx. 4 seconds.
-	Minus Reduce setting values.
+	Plus Increase setting values.

Buttons

The sensors are located under the individual buttons. They must not be pressed too firmly. Only touch the corresponding symbol.

Display





The value that can be set at the present time or that is elapsing will be shown in large digits on the display.

To use the individual time-setting options, tap the  button several times. The symbol that lights up corresponds to the value currently shown in large digits on the display.

Types of heating and functions


Use the function selector to set the types of heating and other functions.

To make sure you always use the right type of heating to cook your food, we have explained the differences and applications below.

Type of heating	Use
 3D hot air	For baking and roasting on one or more levels. The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment.
 Gentle hot air	For gently cooking selected types of food on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back panel around the cooking compartment. This heating function is used to measure both the energy consumption in air recirculation mode and the energy efficiency class.
 Grill, large area	For grilling flat items, such as steaks or sausages, for making toast, and for browning food. The whole area below the grill element becomes hot.
 Circulated air grilling	For roasting poultry, whole fish and larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.

Other functions

Your new oven has yet more functions; see below for a brief description of these.

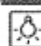Function	Use
 Interior lighting	Switches on the interior lighting; all other functions remain off. Makes it easier to clean the cooking compartment, for example.



Bosch Oven Instructions

en Getting to know your appliance


Temperature

Use the temperature selector to set the temperature in the cooking compartment. You can also use it to select the settings for other functions.

For temperature settings above 250 °C, the appliance reduces the temperature to approx. 240 °C after approx. 10 minutes. If your appliance has the top/bottom heating or bottom heating types, this reduction does not take place.

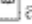Position		Meaning
●	"Off" position	The appliance is not heating.
50-275	Temperature range	The temperature that can be set in the cooking compartment in °C.
1, 2, 3 or I, II, III	Grill settings	The configurable settings for the grill, large area  and small area  (depending on the appliance model). Setting 1 = low Setting 2 = medium Setting 3 = high

Temperature display

When the appliance is heating, the  symbol will be lit on the display. It goes out during pauses in the heating.

When you are preheating the appliance, the optimal time to place your food in the cooking compartment is when the symbol first goes out.

Note: Due to thermal inertia, the temperature displayed may be slightly different to the actual temperature inside the oven.

Cooking compartment

Various functions in the cooking compartment make your appliance easier to use. For example, the cooking compartment is well lit and a cooling fan prevents the appliance from overheating.

Opening the appliance door

If you open the appliance door when the appliance is in operation, the appliance will continue to operate as before.

Interior lighting

With most heating functions and other functions, the interior lighting in the cooking compartment will remain lit while the oven is in operation. When the function selector is turned to bring operation to an end, the lighting will go out.

By turning the function selector to the interior lighting setting, you can switch on the lighting without heating the oven. This makes it easier to clean your appliance, for example.

Cooling fan

The cooling fan switches on and off as required. The hot air escapes above the door.

Caution!

Do not cover the ventilation slots. Otherwise, the appliance may overheat.

So that the cooking compartment cools down more quickly after operation, the cooling fan continues to run for a certain period afterwards.

Bosch Microwave Oven

Basic Settings

Your appliance has basic settings that you can change to suit your needs

Setting	Options
1 Button tone	On* switched on OFF switched off Button tone (will remain active for the start and stop buttons)
2 Demo mode	dEO The appliance is switched off. You can use the buttons and the display, but the button will not be active any function on the appliance (<u>i.e. the microwave has no power</u>). Demo mode is mainly used by dealers.

Changing the Button tone

The appliance must be switched off when you do this.

1. Press and hold the **start** and **stop** buttons at the same time for a couple of seconds 1 will appear in the display.
2. Touch the **start** button **On** will start flashing in the display.
3. Turn the rotary selector to **OFF**.
4. Touch the **start** button. The setting has been applied.
5. Touch the **stop** button.

The button tone has been switched off. You can change this at any time.

Programmes


You can prepare food easily using various programmes. You select a programme and

 
enter the weight of your food. The programme then applies the most suitable setting.

Note you can choose for 8 programmes.


Setting a Programme

Once you have selected a programme make settings as follows/

1. Press the  button repeatedly until the required programme number appears. The indicator light above the button lights up.
2. Press the kg button. The indicator light above the button lights up and a suggested value appears in the display.

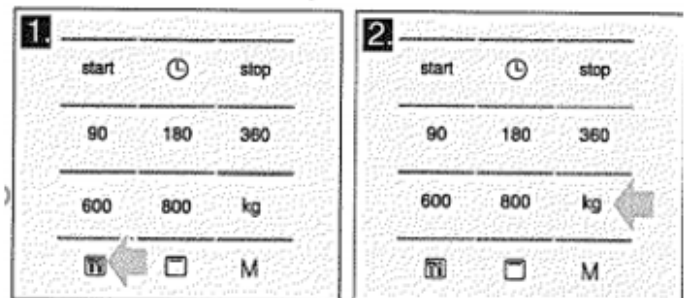

 3. Use the rotary selector to set the weight of the dish.
4. Press the "Start" button.

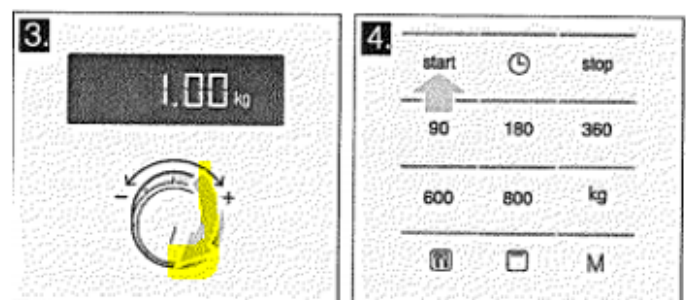

The cooking time for the programme start counting down.

The cooking time has elapsed.


A signal sounds. Open the appliance door and press Stop twice to reset.

 
Bosch Microwave Oven

Grilling

The grill is perfect for gratinating and browning the top of dishes. You can use the grill on its own or in combination with the microwave.

Setting the grill

1. Press the  Grill button. The indicator light above the button lights up and "10:00min" appears in the display.
2. Use the Rotary selector to set the cooking time.

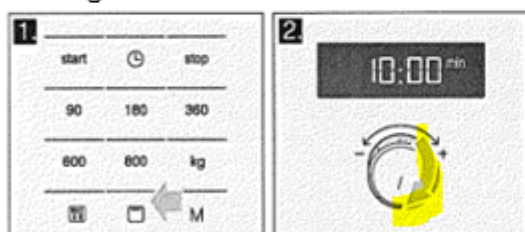

3. Press the "Start" button. The cooking time counts down on the display.

The cooking time has elapsed.

A signal sounds. Open the appliance door or press Stop. The clock re-appears.

Changing the Cooking time.

This can be done at any time. To change the time, use the rotary selector.

Pausing the appliance

Touch the Stop button once or open the door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.


Cancelling

Press the Stop button twice or open the door and press the Stop button once.

Setting the microwave to combi-mode

 
This involves simultaneous operation of the grill and the microwave. Using the microwave makes your dishes ready more quickly and nicely browned. You can switch on all microwave power settings Except 800 and 600 W

Setting the microwave and grill

Example: 360W, grill , 5 minutes.


1. Press the required microwave setting. The indicator light above the button lights up and "1:00" appears in the display.

2. Press the  Grill button.

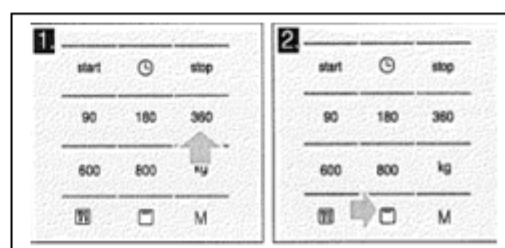

3. Use the rotary selector to set a cooking time.

 4. Press the "Start" button

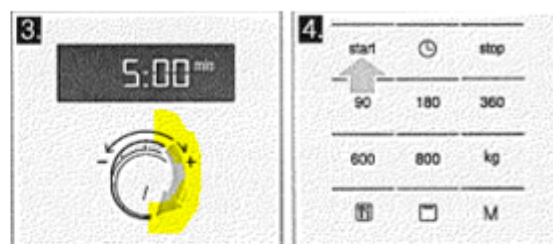

The cooking time counts down in the display.

The cooking time has elapsed.

A signal sounds. Open the appliance door or press Stop. The clock re-appears.

Changing the Cooking time

Pausing the appliance

Cancelling as for Grilling.

Note: You can also adjust the cooking time first and then the microwave power setting.

Bosch Dishwasher Instructions

You can find out everything you need to know about operating your appliance here.

Switching on the appliance

- ▶ Press ①.
The Eco 50° programme is set by default.

Setting timer programming

1. Press $-$ ② or $+$ ②.
 - ✓ "00h:00m" appears on the display.
2. Use $-$ ② or $+$ ② to set the required start time for the programme.
3. Press Start.
 - ✓ This activates time preselection.

Tip: To deactivate timer programming, press $-$ ② or $+$ ② repeatedly until "00h:00m" appears in the display.

Starting the programme

- ▶ Press Start.
- ✓ The programme has ended when the display shows "00h:00m".

Interrupting programme

Note: When you open the appliance door once the appliance has heated up, leave the door slightly ajar for a few minutes and then close it. This will help prevent excess pressure building up in the appliance and stop the appliance door bursting open.

1. Press ①.
 - ✓ The programme is saved and the appliance switches off.
2. Press ① to resume the programme.

Terminate programme

To end a programme early or to switch from a programme that has already started, you will need to cancel it first.

1. Open the appliance door.
2. Press Reset 3 sec. for approx. 3 seconds.
3. Close the appliance door.
 - ✓ The programme is canceled and ends after approx. 1 minute.

 
Switching off appliance

1. Please note the information on Safe use → Page 11.
2. Press ①.
3. To prevent damage from dripping water, turn the water tap off tight (not applicable to appliances with Aqua-Stop).

Tip: If you press ① during the wash cycle, the programme currently running will be interrupted. When you switch the appliance back on, the programme continues automatically.

Whilst machine is on a red light will display on the floor.



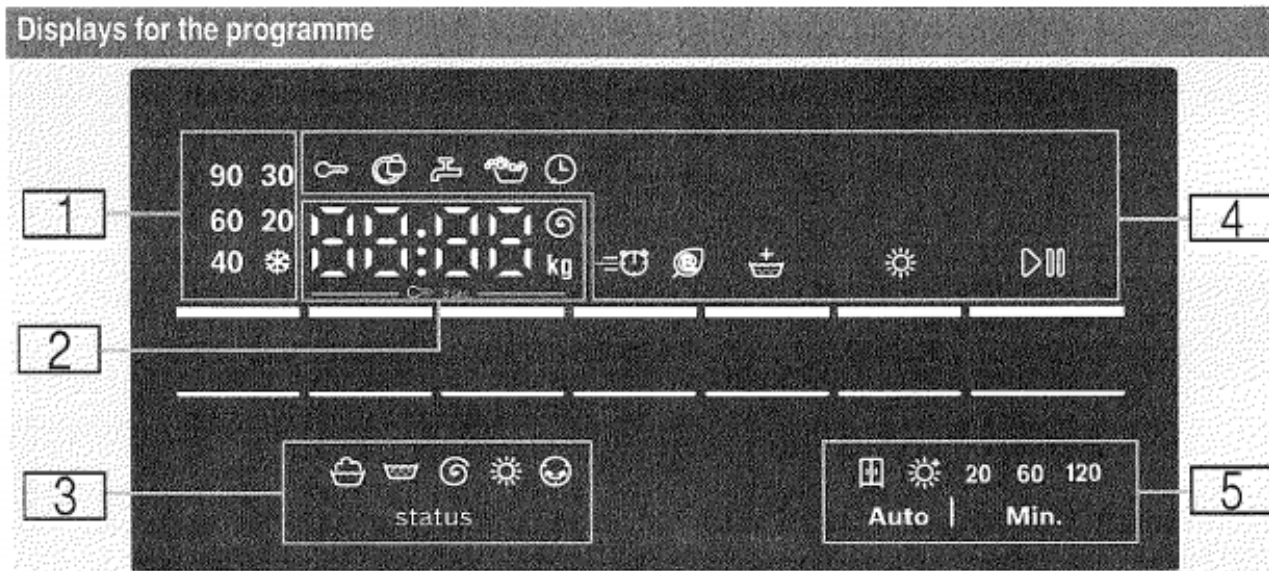













Bosch Washer / Dryer



1 : Temperature for washing programme	* (cold) – 90°	Temperature in °C
2 : Programme information	1:50*	Programme duration after programme selection in h:min (hours:minutes)
	1 – 24 h	Finish in time in h (h=hour)
	7.0 kg*	Max. load for selected programmes
	0 – 1500 Ⓞ*	Spin speed in revolutions per minute. If spin speed is selected as 0 , all spinning processes will be cancelled and the water after final rinse cycle will be pumped out.
Programme status:	End	Programme end
	0:00	Wrinkle guard process is running → Page 31
	----	End of programme with spin speed setting ----
Further information:	E:--*	Fault display
	0*	Setting the signal → Page 39
3 : Programme progress symbols	🧺	Washing
	🧺	Rinsing
	Ⓞ	Draining/Spinning

Bosch Washer/Dryer

Getting to know your appliance **en**

4 : Programme information and additional function symbols	 lights up	On if childproof lock has been activated → <i>Page 30</i>
	 flashes	The childproof lock is activated, and if the programme selector has been adjusted or the buttons have been pressed
	 lights up	When the door is locked
	 flashes	When pressing the  Start/Reload button to start the programme, the door is not closed properly.
	 lights up	Water pressure too low. This extends the programme duration
	 flashes	The tap has not been turned on or there is no water pressure
		On if too much foam detected, additional rinse cycle added on
		On if finish in time was selected
Speed Perfect		On if the desired additional function is selected, see details → <i>Page 38</i>
Eco Perfect		
Aqua Plus		
Dry		On if drying function is activated.
Start/Reload		On if the appliance is running; flashes if the appliance is ready or paused.
5 : Selectable drying mode and dry time		Cupboard dry (Auto dry)
		Extra Dry (Auto dry)
	20	20 minutes machine cooling
	60, 120	60/120 minutes time dry

* Depends on selected programmes/additional functions.

Bosch Washer / Dryer

 
Operating the appliance **en**

Notes

- Options can be selected, deselected or changed depending on the progress of the programme.
- The buttons are sensitive, they only need to be touched gently. If the button **°C Temp.**, **rpm**, **Finished in** is held down, the setting options are automatically scrolled through.


Changing default settings for a washing programme, e. g. washing temperature:

- Touch the **°C Temp.** button to set desired washing temperature.

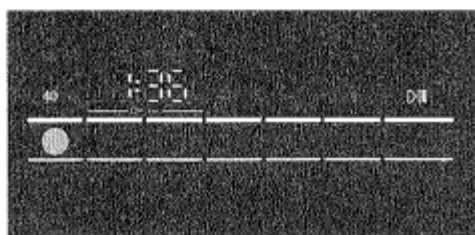

Changing the additional functions for a washing programme, e.g. select **SpeedPerfect**:

 - Touch the **SpeedPerfect** **Eco Perfect** button until the indicator light comes on.

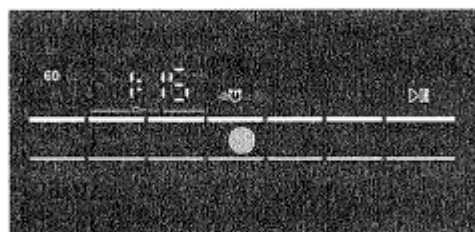

Note:

After changing the programme default settings and/or additional functions, the programme duration may change.

Adjusting the drying programme

 
Note:

If an individual drying programme or washing and drying without interruption is selected, you can change the default settings for the drying programme if required.

Overview of programmes → *Page 32*

Changing the default settings for a drying programme:

- Touch the **Dry** button to set the desired drying mode or drying time (only for an individual drying programme).

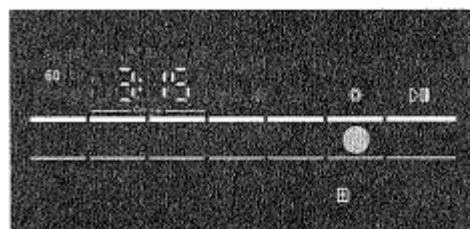

Note:




After changing the default settings for the drying programme, the programme duration may change.




Bosch Washer / Dryer

en Operating the appliance

Childproof lock

You can secure the washer dryer to prevent the set functions from being changed inadvertently. To do this, activate the childproof lock when the programme has started.

Activating/deactivating: Touch and hold the buttons  **rpm** and  **Finished in** for approx. 3 seconds. The symbol  is indicated in the display. If the button signal is activated, an acoustic signal sounds.


-  lights up: The childproof lock is activated.
-  flashes: The childproof lock is active and the programme selector has been adjusted. To prevent the  symbol from flashing, reset the programme selector to the initial programme. The symbol lights up again.

Note:




The childproof lock may remain activated until the next programme starts, even after the washer dryer has been switched off. If this is the case, deactivate the childproof lock before the programme starts and, if required, re-activate after the programme starts.

Reloading the laundry

When the programme has started, the laundry can be reloaded or taken out as required.

Touch the  **Start/Reload** button. The washer dryer checks whether reloading is possible.

Notes

- If there is a high water level, high temperature or if the drum is rotating, the door remains locked for safety reasons and reloading is not possible.
If the following is indicated on the display panel:
 is lit → Reloading is not possible. To continue the programme, select the  **Start/Reload** button.
- Do not open the door until the door lock symbol  goes out.
- Do not leave door open for a prolonged period – water could run out of the laundry.
- The reloading function cannot be activated during the drying phase.

Changing the programme

If you have started the wrong programme by mistake, you can change the programme as follows:

1. Select  **Start/Reload**.
2. Select another programme. If required, adjust the default settings and/or select additional functions.
3. Select  **Start/Reload**. The new programme starts from the beginning.

Interrupting or ending the programme

For washing programmes at high temperature:

1. Touch  **Start/Reload** button.
2. To cool down laundry: select  **Rinse**.
3. Touch  **Start/Reload** button.

For washing programmes at low temperature:

1. Touch  **Start/Reload** button.
2. Select **Spin/Drain** .
3. Touch  **Start/Reload** button.

Bosch Washer / Dryer

Operating the appliance **en**

For drying programmes:

1. Select **Intensive Dry** or **Gentle Dry**.
2. Touch ☀ **Dry** button, and set drying time to 20 minutes.
3. Touch ▷||| **Start/Reload** button.

End of the programme

End or - - - - (**Rinse stop** = without final drain/spin cycle) is indicated in the display and acoustic signal sounds.

Setting the signal


If - - - - (**Rinse stop** = without final drain/spin cycle) was selected, press ▷||| **Start/Reload** button to start the final drain/spin cycle.

Notes

- The programme continues by pumping out the water and spinning the laundry (the standard spin speed can be changed beforehand).
- If only the water is to be pumped out, approx. 1 minute after the programme starts, touch the ▷||| **Start/Reload** button before the spin cycle starts. The programme is interrupted and the door lock is released. The laundry can be removed.
- If **Hot** flashes in the display before the drying programme ends, the temperature in the drum is high. The programme for cooling the drum runs until the temperature in the drum has dropped.
- Wrinkle guard process starts after drying process is finished to prevent laundry getting wrinkle if you do not take laundry out in time. The process lasts about 30 minutes. **0:00** will be displayed in time display and ☺ symbol will be displayed as the status symbol. You can press any button or rotate the programme selector to another position to terminate this process, then the door will be released and laundry can be taken out.


After washing/drying

 1. Open the door and remove the laundry.
2. Turn the programme selector to **Off**. The appliance is switched off.
3. Turn off the tap.
Not required for Aqua-Stop models.

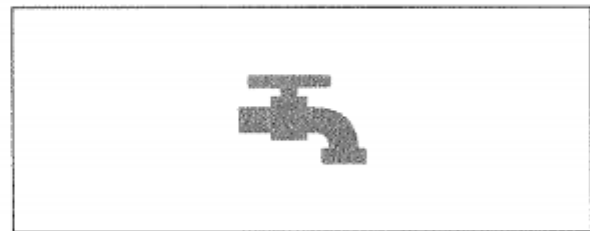

Notes

 - Do not leave any items of laundry in the drum. In the next wash they may shrink or discolour another item.
- Remove any foreign objects from the drum and the rubber seal – risk of rust.

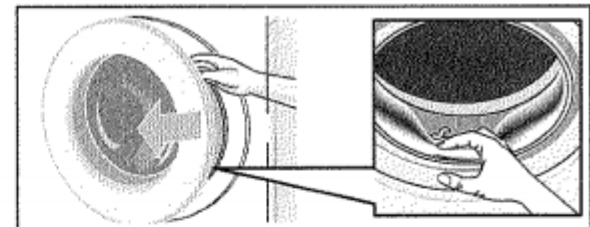

- Leave the detergent drawer and door open so that residual water can evaporate.
- Always remove the laundry.
- Always wait until the programme ends, as the appliance could still be locked. Then switch the appliance on and wait for the unlocking device.
- When the display panel has gone out at the end of the programme, energy-saving mode is active. To activate the display again, select any button.


Bosch Washer / Dryer

en Selecting additional functions

Selecting additional functions


You can select your desired additional functions by touching the respective buttons.


Speed Perfect

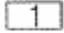: For a shorter wash time with a comparable washing result to the standard programme.


Note: Do not exceed maximum load.
Overview of programmes → *Page 32*

Eco Perfect

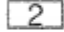: Energy-optimised washing by reducing the temperature while achieving a consistent washing result.

Note: The washing temperature is lower than the selected temperature. For special hygiene requirements, the  **Allergy+** programme is recommended.

Aqua Plus

: Additional rinse cycle depending on the programme; longer programme length for particularly sensitive skin and/or for areas with very soft water.

 
Bosch Washer / Dryer

Setting the signal en

Setting the signal


Setting signal volume

1. Activate setting mode for signal volume

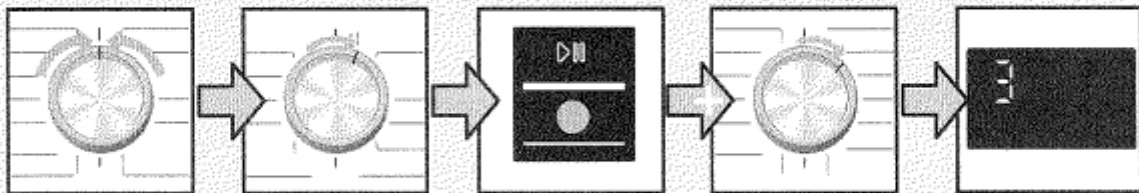

Turn to **Off** 1 step clockwise Press **▶▶ Start/Reload** and hold and 1 step clockwise Release

 2. a) Set volume for **information signals**

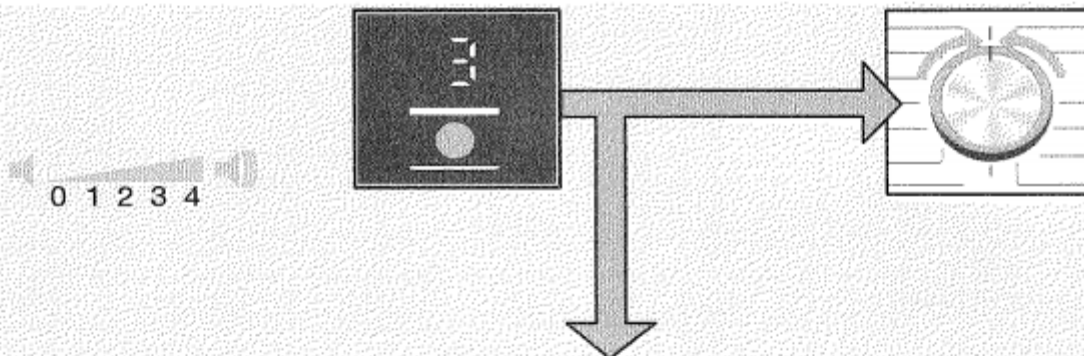


Press the **Finished in** and set Volume

or

Set to **Off**, setting mode for signal volume is left.

 2. b) Selecting volume of the **button signals**

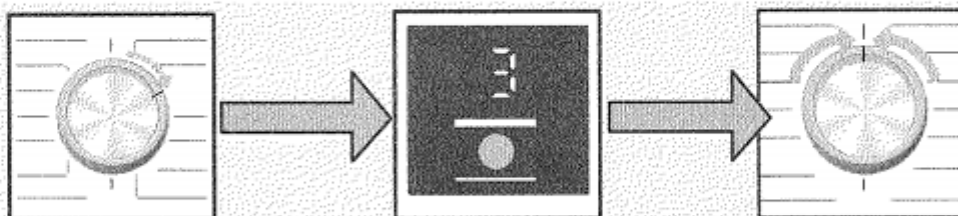

1 step clockwise

Press the **Finished in** and set Volume

Set to **Off**, setting mode for signal volume is left

Wine Cooler Instructions

To switch the power on/off

Press and hold the power button for one second to switch the wine cooler on.
Press and hold the power button for five seconds to switch the wine cooler off.

To change the temperature

Press the “+” or “-” buttons for the appropriate zone until the required temperature is shown on the display.

The pre-set temperature is 8°C/46°F for left/upper zone and 12°C/54°F for the right/lower zone.

To change the display from Fahrenheit to Celsius, or Celsius to Fahrenheit, press and hold the light button for five seconds.

To view the set temperature, touch the appropriate “+” or “-” button at any time and the set temperature will flash in the LED display for five seconds.

 
 
 
 
 
The display shows the current internal temperatures when the wine cooler is on.

Optimal temperature selection

Whilst wine is best stored at temperatures between 13°C and 15°C, your wine can also be stored at drinking temperature, for red wine this is between 15°C and 17°C, and the white wine between 12°C and 13°C.

Tassimo Coffee Maker


1. Get your TASSIMO ready

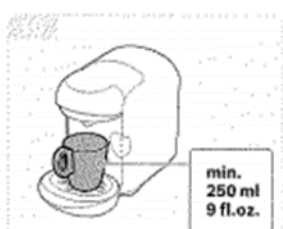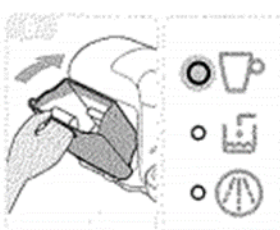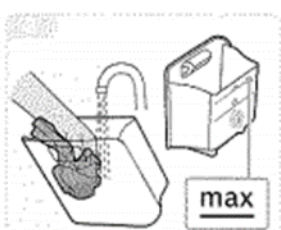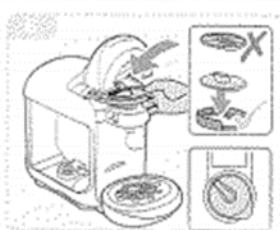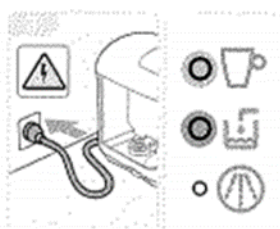

Tassimo Coffee Maker



 2. Enjoy your first TASSIMO Drink

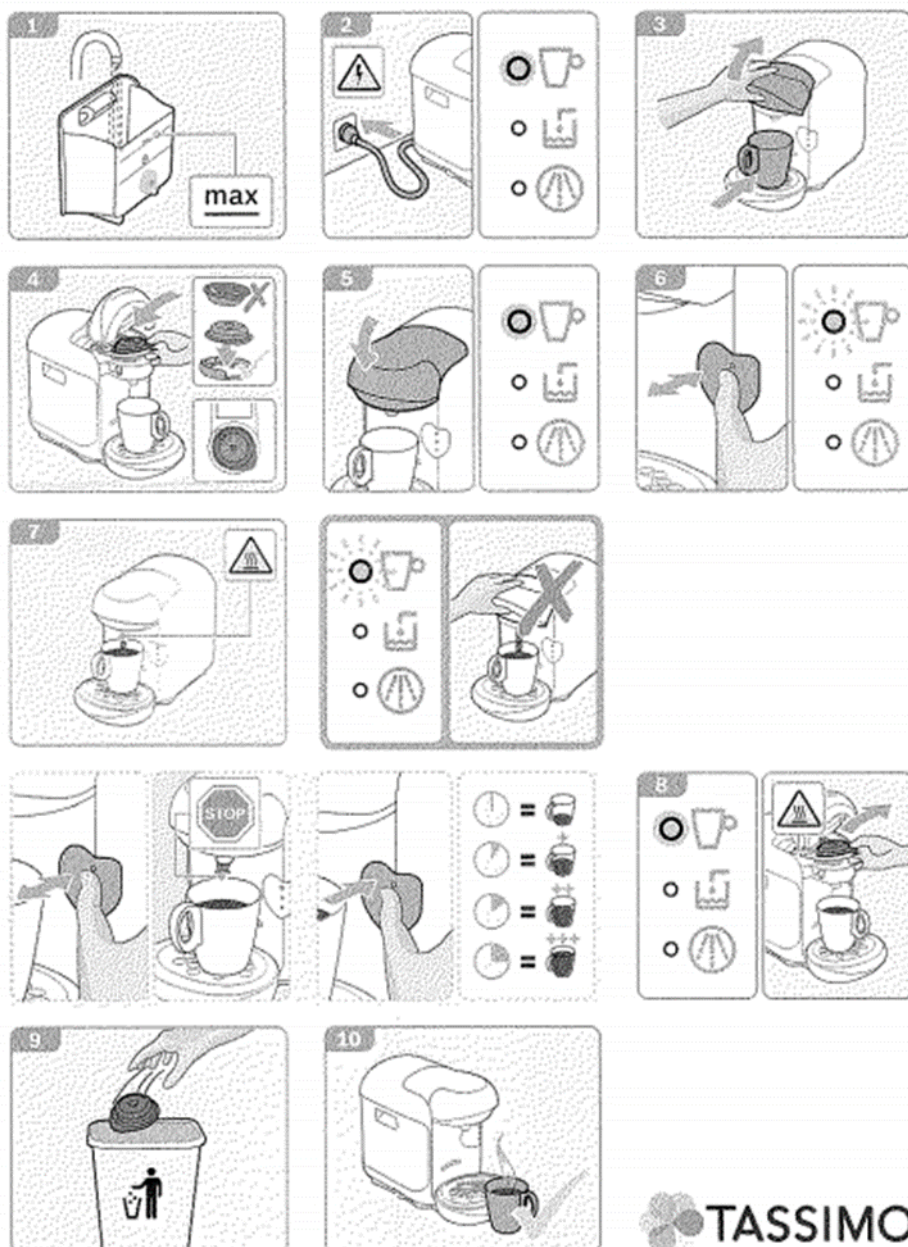

8001137740 10/18

 TASSIMO